

Least square estimation of phase, frequency and PDEV

Magnus Danielson
R&D System Design
Net Insight AB
Stockholm, Sweden
Email: magda@netinsight.net

François Vernotte
Observatory THETA/UTINAM,
UBFC/UFC and CNRS
Besançon, France
Email: francois.vernotte@obs-besancon.fr

Enrico Rubiola
CNRS FEMTO-ST Institute,
Dept Time and Frequency
Besançon, France
Email: rubiola@femto-st.fr

Abstract—The Ω preprocessing was introduced to improve phase noise rejection by using a least square algorithm. The associated variance is the PVAR which is more efficient than MVAR to separate the different noise types. However, unlike AVAR and MVAR, the decimation of PVAR estimates for multi- τ analysis is not possible if each counter measurement is a single scalar. This paper gives a decimation rule based on two scalars, the processing blocks, for each measurement. For the Ω preprocessing, this implies the definition of an output standard as well as hardware requirements for performing high-speed computations of the blocks.

Index Terms—Least square methods, Phase noise, Stability analysis, Time-domain analysis.

I. INTRODUCTION

A. Background

Allan variance (AVAR) [1] and the log-log plot of Allan deviation (ADEV) is the standard tool since its introduction in 1966, and still relied on the in the time and frequency community. With the introduction of Parabolic Variance (PVAR) [2] an improved tool was presented, potentially more suited to practical problems for fast processes.

It's benefits lies in that it can separate white PM from flicker PM and it rejects white PM of the counter input stage with $1/\tau^3$ in the variance. The white PM rejection is relevant as it integrates over $0.5 - 5GHz$ on some counters, thus having a high noise bandwidth.

PVAR combines the advantage of both methods, but comes at the cost of processing power needed, which could be addressed using FPGA technology for high speed sample gathering and decimation prior to further processing in software.

The major reservation to the use of PVAR has been that no decimation rule was known in the T&F community, thus the full series of phase-time data had to be stored and processed for each value of τ in the PDEV log-log plot. The evaluation of frequency over 1 day takes storing 10^{11} phase-time data sampled at $1\mu s$ interval.

This article presents the decimation rule needed, allowing for significant reduction in memory and processing needs, thus providing means for making the PVAR processing practical and useful. For each value of τ we only need a short series data (two scalars) to be stored. The maximum record length is limited by the confidence level desired, 10^3 being probably

large enough for virtually all practical purposes. The algorithm is surprisingly simple because the least square estimator relies on linear operators only. This also allows the decimator rule to be applied recursively for further reductions as needed in software for longer τ processing.

B. No preprocessing

Traditional time-interval and frequency counters provided no preprocessing, even if average by N was possible to select. A time-interval counter produces a sequence of phase difference samples, while the frequency read-out produces the difference between these phase differences divided by the time between them. The improvement of counters lay in the improved resolution of the single-shot resolution and the reduction of trigger noise in each such measurement, thus reducing both the systematic and random noise processes in the measurements. Another major development was the ability to make continuous measurement, where samples will be collected without a dead-time in between the last sample of the previous measure and the first of the next measure, but where this is the same sample.

C. Λ preprocessing and Λ -counters

In order to meet the challenges of white noise limitations to measure while measuring optical beat frequencies, Snyder [3] introduced a method to pre-filter samples in order to improve the noise rejection, achieving a deviation having the slope of $1/\tau^{1.5}$ over the traditional $1/\tau$ slope of white noise reduction, where τ is the time between phase observations, this providing a much improved filtering for the same N samples being averaged. Snyder also presents a hardware accumulation that allows for such improved frequency observations so that a high rate of observations can be accumulated in high rate by hardware, and only a postprocessing need to be achieved in software. This have since been introduced into commercial counters as means to increase the frequency reading precision compared to the update rate.

D. Effect on variance estimation

The use of different frequency estimator preprocessing support in counters has shown to have an impact on the estimation of Allan variance (AVAR), as shown by Rubiola [4]. Applying

TABLE I
ALLAN, MODIFIED ALLAN AND PARABOLIC VARIANCE OF THE DIFFERENT NOISE FORMS.

Variance Type		AVAR	MVAR	PVAR
Preprocessing type		Π	Λ	Ω
Noisetype	$S_y(f)$			
White Phase	$h_2 f^2$	$\frac{3f_H}{4\pi^2\tau^2} h_2$	$\frac{3}{8\pi^2\tau^3} h_2$	$\frac{3}{2\pi^2\tau^3} h_2$
Flicker Phase	$h_1 f$	$\frac{3[\gamma + \ln(2\pi f_H \tau)] - \ln 2}{4\pi^2\tau^2} h_1$	$\frac{24 \ln 2 - 9 \ln 3}{8\pi^2\tau^2} h_1$	$\frac{3[\ln(16) - 1]}{2\pi^2\tau^2} h_1$
White Frequency	h_0	$\frac{1}{2\tau} h_0$	$\frac{1}{4\tau} h_0$	$\frac{3}{5\tau} h_0$
Flicker Frequency	$h_{-1} f^{-1}$	$2 \ln(2) h_{-1}$	$\frac{27 \ln(3) - 32 \ln(2)}{8} h_{-1}$	$\frac{2[7 - \ln(16)]}{5} h_{-1}$
Random Walk Frequency	$h_{-2} f^{-2}$	$\frac{2\pi^2\tau^2}{3} h_{-2}$	$\frac{11\pi^2\tau}{20} h_{-2}$	$\frac{26\pi^2\tau}{35} h_{-2}$
$\gamma = 0.577215$, the Euler-Mascheroni constant				

the Λ preprocessing to Allan variance processing produces a variance known as a Modified Allan variance (MVAR) [5] as presented by Allan. However, in order to extend the preprocessing properties to get the proper MVAR, the data must be decimated properly. This requires us to distinguish the different type of preprocessing. Rubiola introduced the term Π -counter for the classical not preprocessed response, as it present an evenly weighting of the frequency, and the weight function graphically looks similar to the Π sign. Similarly, the weight function on frequency for the preprocessing method of Snyder is referred to as a Λ -counter, as it is produced by the Λ preprocessing.

Table I give the formulas for the variance of different preprocessing types and hence variance types. Notice how White Phase Modulation has a different slope for MVAR and PVAR compared to AVAR, this illustrate the improved white noise rejection of these variances compared to no preprocessing.

E. Preprocessing filters

For Π -counters, we can always produce AVAR and MVAR. For Λ -counters (a counter in it's Λ pre-filtering mode), we can only produce proper MVAR results with proper decimation of data. Just using the frequency estimates in Allan Variance will not provide proper results, but biased results, where the bias decreases for longer τ as the fixed bandwidth of the counters preprocessing wears off as the Allan Variance itself has a filtering effect. The filtering thus represents the effect of a low-pass filter, lowering the system bandwidth and hence the systems sensitivity to white noise. Proper decimation requires that the decimation routines process data such that the filtering continues to reduce the bandwidth of this filter as data is combined for longer observation periods, and thus maintain the benefit of such processing.

F. Ω preprocessing and Ω -counters

This paper concerns itself with the decimation of data in a third type of counter known as the Ω -counter, thus a counter having a frequency weight function looking similar to the Ω sign. This is a parabolic curve which is the result of using a least-square estimation of the frequency slope out of the phase data. This processing produces a new type of variance known as the Parabolic Variance (PVAR) and has even better properties with regard to suppressing the white noise. However, the [2] gave no guidance to an algorithm of decimation, or how the hardware accumulation should be done such that performance benefits can be achieved for any multiple of such block length.

This paper develops a discrete time estimators and then decimation methods such that high speed accumulation can be used together with postprocessing to achieve memory and computational efficient processing for multi- τ PDEV log-log plots, this without altering the properties of PVAR as given in [2] and Table I. After reminding the main features of the Ω -counters and of the PVAR (§ II), the basics of decimation will be presented in section § III. Unfortunately, it turns out that the decimation is not a trivial problem with Ω -counters and then with PVAR. But a simple solution will be given in § V after having recalled the basics of least squares (§ IV). Finally, recommendation will be given for choosing a standard for the output format of the Ω -counters in § VI.

II. PVAR AND Ω -COUNTERS

The concept of Ω -counter was formulated by Rubiola [2], based on Johansson [6], to achieve the optimal rejection of white phase noise for short term frequency measurement by using an estimator based on the least squares. Such methods was presented by Barnes [7], for the purpose of drift estimation under presence of white noise, but Johansson [6] makes the first connection between least square methods and AVAR, but

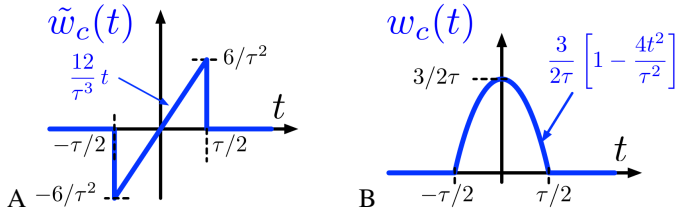


Fig. 1. weight functions of the Ω -counter computed from phase data (A, left) or from frequency deviations (B, right).

without providing the effect on various noise-types and related bias functions.

The principle of this frequency estimation is to calculate the least squares slope over a phase sequence $\{x_k\}$ obtained at instants $t_k = k\tau_0$ with $k \in \{0, \dots, N-1\}$ where τ_0 is the sampling step and $\tau = (N-1)\tau_0$ the total length of the sequence. It is well known that the least squares provide the best slope estimate in the presence of white noise (i.e. white PM noise) [7]. Such an estimate, that we denote \hat{y}^Ω , is obtained by a weighting average of the phase data:

$$\hat{y}^\Omega = \int_0^\tau \tilde{w}_c(t - \frac{\tau}{2})x(t) dt \quad (1)$$

$$\hat{y}^\Omega \simeq \frac{1}{\tau_0} \sum_{k=0}^{N-1} \tilde{w}_c(t_k - t_{N/2})x_k \quad (2)$$

where the phase weight function $\tilde{w}_c(t)$ is defined as:

$$\begin{cases} \tilde{w}_c(t) = \frac{12}{\tau^3}t & \text{if } t \in [-\tau/2, +\tau/2] \\ \tilde{w}_c(t) = 0 & \text{elsewhere.} \end{cases} \quad (3)$$

The estimator for sample data (2) is here given as an approximate, but a bias free variant will be presented in the paper. It has been demonstrated that, in the presence of white PM, the variance of this frequency estimate is lower by a factor of $\frac{3}{4}$ than the variance of the corresponding Λ -counter estimate. Moreover, since the least squares are optimal for white noise, the variance of the Ω -counter estimate is minimal. It is then an efficient estimator [8].

This estimator may be also computed from frequency deviation samples $\{\bar{y}_k\}$ defined as $\bar{y}_k = \frac{x_{k+1} - x_k}{\tau_0}$:

$$\hat{y}^\Omega = \int_0^\tau w_c(t - \frac{\tau}{2})\bar{y}(t) dt \quad (4)$$

$$\hat{y}^\Omega \simeq \sum_{k=0}^{N-1} w_c(t_k - t_{N/2})\bar{y}_k \quad (5)$$

where the frequency weight function $w_c(t)$ is defined as:

$$\begin{cases} w_c(t) = \frac{3}{2\tau} \left[1 - \frac{4t^2}{\tau^2} \right] & \text{if } t \in [-\tau/2, +\tau/2] \\ w_c(t) = 0 & \text{elsewhere.} \end{cases} \quad (6)$$

The estimator for sample data (5) is again given as an approximate, but a bias free variant will be presented in the paper.

The Ω -counter weight functions for phase data as well as for frequency deviations are plotted in Figure 1. The shape of

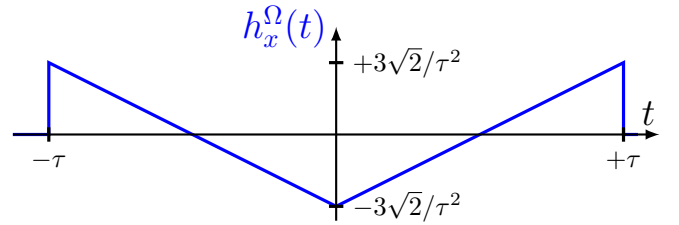


Fig. 2. weight function associated to PVAR for phase data.

$w_c(t)$ (see Figure 1-B) explains the choice of the Greek letter Ω to name this counter [4], [2].

For each type of counter, a specific statistical estimator has been defined for stability analysis: AVAR for Π -counters [1], the traditional time-interval or frequency counter, and MVAR for Λ -counters [5], as inspired by the work of Snyder [3]. In the same way, the Parabolic variance (PVAR) was defined to handle Ω -counter measurements [9], [10]. The general relationship defining a X -variance (X being A, M or P) from a χ -counter (χ being Π , Λ or Ω) is:

$$X\text{VAR}(\tau) = \frac{1}{2} \langle (\hat{y}_2^X - \hat{y}_1^X)^2 \rangle$$

where \hat{y}_1^X is the frequency estimate given by a χ -counter at instant t_1 and $\langle \cdot \rangle$ stands for an ensemble average over all available frequency estimates. In this connection, PVAR is then defined as $\text{PVAR}(\tau) = \frac{1}{2} \langle (\hat{y}_2^\Omega - \hat{y}_1^\Omega)^2 \rangle$ [9]. The weight function associated to PVAR for phase data is plotted in Figure 2.

PVAR, like MVAR, is intended to deal with short term analysis (and then white and flicker PM noises) whereas AVAR is preferred for the measurement of long term stability and timekeeping. The main advantage of PVAR regarding MVAR relies on the larger EDF of its estimates, and in turn the smaller confidence interval. The best of PVAR is its power to detect and identify weak noise processes with the shortest data record. PVAR is superior to MVAR in all cases, and also superior to AVAR for all short-term and medium-term processes, up to flicker FM included. AVAR is just a little better with random walk and drift. Therefore, PVAR should be an improved replacement for MVAR in all cases, provided the computing overhead can be accepted.

Thus, the only drawback of PVAR lies in the difficulty to find its decimation algorithm as stated in § I-F. In order to solve this problem, let us remind the basics of decimation.

III. DECIMATION WITH AVAR AND MVAR

A. AVAR

The frequency estimate given by a Π -counter over the time interval $\tau = N\tau_0$ beginning at the instant t_k is

$$\hat{y}_{k,\tau}^\Pi = \frac{x_{k+N} - x_k}{\tau}.$$

Therefore, $\text{AVAR}(\tau)$ is obtained from

$$\begin{aligned}\text{AVAR}(\tau) &= \frac{1}{2} \left\langle (\hat{\mathbf{y}}_{k+2N}^{\Pi} - \hat{\mathbf{y}}_k^{\Pi})^2 \right\rangle \\ &= \frac{1}{2\tau^2} \left\langle (x_{k+2N} - 2x_{k+N} + x_k)^2 \right\rangle\end{aligned}$$

where the ensemble average is performed over all k values (overlapped AVAR).

The passage from τ to 2τ is quite obvious:

$$\hat{\mathbf{y}}_{k,2\tau}^{\Pi} = \frac{x_{k+2N} - x_k}{2\tau} = \frac{\hat{\mathbf{y}}_{k,\tau}^{\Pi} + \hat{\mathbf{y}}_{k+N,\tau}^{\Pi}}{2}$$

and then

$$\text{AVAR}(2\tau) = \frac{1}{2} \left\langle \left(\frac{\hat{\mathbf{y}}_{k+3N}^{\Pi} + \hat{\mathbf{y}}_{k+4N}^{\Pi} - \hat{\mathbf{y}}_k^{\Pi} - \hat{\mathbf{y}}_{k+N}^{\Pi}}{2} \right)^2 \right\rangle.$$

This decimation rule can be easily extended to any multiple of τ . Therefore, the knowledge of a sequence of contiguous $\{\hat{\mathbf{y}}_{k,\tau}^{\Pi}\}$ with $k \in \{0, \dots, N-1\}$ allows us to compute AVAR for any multiple of τ up to $N\tau/2$.

B. MVAR

The frequency estimate given by a Λ -counter over the time interval $\tau = N\tau_0$ beginning at the instant t_k is

$$\hat{\mathbf{y}}_{k,\tau}^{\Lambda} = \frac{1}{N\tau} \sum_{j=0}^{N-1} (x_{k+j+N} - x_{k+j}). \quad (7)$$

Thus

$$\begin{aligned}\text{MVAR}(\tau) &= \frac{1}{2} \left\langle (\hat{\mathbf{y}}_{k+N}^{\Lambda} - \hat{\mathbf{y}}_k^{\Lambda})^2 \right\rangle \\ &= \frac{1}{2N^2\tau^2} \left\langle \left[\sum_{j=0}^{N-1} (x_{k+j+2N} - 2x_{k+j+N} + x_{k+j}) \right]^2 \right\rangle.\end{aligned} \quad (8)$$

The passage from τ to 2τ is given by:

$$\begin{aligned}\hat{\mathbf{y}}_{k,2\tau}^{\Lambda} &= \frac{1}{2N\tau} \sum_{j=0}^{2N-1} (x_{k+j+2N} - x_{k+j}) \\ &= \hat{\mathbf{y}}_{k,\tau}^{\Lambda} + 2\hat{\mathbf{y}}_{k+N,\tau}^{\Lambda} + \hat{\mathbf{y}}_{k+2N,\tau}^{\Lambda}.\end{aligned}$$

More generally, it can be demonstrated that the general decimation rule is:

$$\begin{aligned}\hat{\mathbf{y}}_{k,n\tau}^{\Lambda} &= \sum_{i=0}^{n-2} (i+1) \left(\hat{\mathbf{y}}_{k+iN,\tau}^{\Lambda} + \hat{\mathbf{y}}_{k+(2n-2-i)N,\tau}^{\Lambda} \right) \\ &\quad + n\hat{\mathbf{y}}_{k+(n-1)N,\tau}^{\Lambda}.\end{aligned}$$

Here also, the knowledge of a sequence of contiguous $\{\hat{\mathbf{y}}_{k,\tau}^{\Lambda}\}$ with $k \in \{0, \dots, N-1\}$ allows us to compute MVAR for any multiple of τ up to $N\tau/3$.

C. PVAR

The frequency estimate given by an Ω -counter over the time interval $\tau = N\tau_0$ beginning at the instant t_k is given by (2) and (3). But in this case, no decimation rule may be found for passing from τ to a multiple $n\tau$ for any $n \in \mathbb{N}$. In order to get a decimation rule, we will demonstrate that an Ω -counter must provide 2 scalars. Let us go back to the basics of the least squares to better understand this issue.

IV. LEAST-SQUARE FREQUENCY ESTIMATION

A. Linear system

The least square system producing the output vector \mathbf{x} of phase samples from the system state vector \mathbf{c} using the system matrix \mathbf{A} and assuming the error contribution of \mathbf{d} as defined in $\mathbf{x} = \mathbf{A}\mathbf{c} + \mathbf{d}$ having the least square estimation as given by

$$\hat{\mathbf{c}} = (\mathbf{A}^T \mathbf{A})^{-1} \mathbf{A}^T \mathbf{x} \quad (9)$$

For this system, a linear model of phase and frequency state is defined

$$\hat{\mathbf{c}} = \begin{pmatrix} \hat{x} \\ \hat{y} \end{pmatrix} \quad (10)$$

A block of phase samples, taken with τ_0 time in-between them, building the series x_n where n is in the range $\{0, \dots, N-1\}$ where by convention N is the number of phase samples. In the system model, each sample n has an associated observation time $t_n = \tau_0 n$. The matrix \mathbf{A} and the vector \mathbf{x} then becomes

$$\mathbf{A} = \begin{pmatrix} 1 & t_0 \\ \vdots & \vdots \\ 1 & t_n \\ \vdots & \vdots \\ 1 & t_{N-1} \end{pmatrix} = \begin{pmatrix} 1 & 0 \\ \vdots & \vdots \\ 1 & \tau_0 n \\ \vdots & \vdots \\ 1 & \tau_0(N-1) \end{pmatrix} \quad (11)$$

$$\mathbf{x} = \begin{pmatrix} x_0 \\ \vdots \\ x_n \\ \vdots \\ x_{N-1} \end{pmatrix} \quad (12)$$

B. Closed form solution

Inserting (11) and (12) into (9) results in

$$\begin{aligned}\hat{\mathbf{c}} &= \left[\begin{pmatrix} \dots & 1 & \dots \\ \dots & \tau_0 n & \dots \end{pmatrix} \begin{pmatrix} \vdots & \vdots \\ 1 & \tau_0 n \\ \vdots & \vdots \end{pmatrix} \right]^{-1} \\ &\quad \times \begin{pmatrix} \dots & 1 & \dots \\ \dots & \tau_0 n & \dots \end{pmatrix} \begin{pmatrix} \vdots \\ x_n \\ \vdots \end{pmatrix}\end{aligned} \quad (13)$$

simplifies into

$$\hat{\mathbf{c}} = \begin{pmatrix} \sum_{n=0}^{N-1} 1 & \tau_0 \sum_{n=0}^{N-1} n \\ \tau_0 \sum_{n=0}^{N-1} n & \tau_0^2 \sum_{n=0}^{N-1} n^2 \end{pmatrix}^{-1} \begin{pmatrix} \sum_{n=0}^{N-1} x_n \\ \sum_{n=0}^{N-1} nx_n \end{pmatrix} \quad (14)$$

replacing the sums C and D

$$C = \sum_{n=0}^{N-1} x_n \quad (15)$$

$$D = \sum_{n=0}^{N-1} nx_n \quad (16)$$

becoming

$$\hat{\mathbf{c}} = \begin{pmatrix} \frac{N}{\tau_0} & \frac{\tau_0 \frac{N(N-1)}{2}}{\tau_0^2 \frac{N(N-1)(2N-1)}{6}} \end{pmatrix}^{-1} \begin{pmatrix} C \\ \tau_0 D \end{pmatrix} \quad (17)$$

inverse can be solved as

$$\begin{pmatrix} \frac{N}{\tau_0} & \frac{\tau_0 \frac{N(N-1)}{2}}{\tau_0^2 \frac{N(N-1)(2N-1)}{6}} \end{pmatrix}^{-1} = \frac{12}{\tau_0^2 N(N-1)(N+1)} \times \begin{pmatrix} \tau_0^2 \frac{(N-1)(2N-1)}{6} & -\tau_0 \frac{N-1}{2} \\ -\tau_0 \frac{N-1}{2} & 1 \end{pmatrix} \quad (18)$$

insertion of (10) and (18) into (17) resulting in the estimators

$$\hat{x} = \frac{6}{N(N+1)} \left(\frac{(2N-1)}{3} C - D \right) \quad (19)$$

$$\hat{y} = \frac{12}{\tau_0 N(N-1)(N+1)} \left(-\frac{N-1}{2} C + D \right) \quad (20)$$

these estimators have been verified to be bias free from static phase and static frequency, as expected from theory. Using these estimator formulas the phase and frequency can be estimated of any block of N samples for which the C and D sums have been calculated.

C. LS weight function

From (20), we can write $w_{y,x}(n)$, the weight function of the unbiased LS frequency estimator on $\{x_n\}$ data:

$$\begin{aligned} \hat{y} &= \sum_{n=0}^{N-1} \frac{12}{\tau_0 N(N-1)(N+1)} \left(-\frac{N-1}{2} + n \right) x_n \\ &= \sum_{n=0}^{N-1} w_{y,x}(n) x_n \end{aligned} \quad (21)$$

with

$$w_{y,x}(n) = \frac{12}{\tau_0 N(N-1)(N+1)} \left(-\frac{N-1}{2} + n \right)$$

Similarly, the weight functions of the unbiased LS frequency estimator on frequency samples become

$$\hat{y} = \sum_{m=0}^{N-2} w_{y,y}(m) y_m \quad (22)$$

$$w_{y,y}(m) = \frac{6(N-1-m)(m+1)}{\tau_0 N(N-1)(N+1)} \quad (23)$$

These weight functions are different from $\tilde{w}_c(t)$ and $w_c(t)$ introduced in (3) and (6) because the later are centered and calculated in a continuous case (see [2]). It can be easily verified that:

$$\lim_{N \gg 1} w_{y,x}(n) = \frac{1}{\tau_0} \tilde{w}_c(t_n) \quad \text{and} \quad \lim_{N \gg 1} w_{y,y}(n) = w_c(t_n)$$

with $t_n = (n - (N-1)/2)\tau_0$ for centering the dates. The continuous time definition does not compare easily to those of discrete time, where the discrete time have the terms $(N-1)(N+1)$ rather than N^2 in order to be bias-free. Therefore, for a lower number of samples N , $w_{y,x}(n)$ and $w_{y,y}(n)$ should be used to avoid estimator biases (see § IV-F).

D. PVAR calculation

The PVAR estimator calculation is defined from the equations

$$\hat{\sigma}_P^2(\tau) = \frac{1}{M} \sum_{i=1}^M (\alpha_i)^2 \quad (24)$$

$$\alpha_i = \frac{1}{\sqrt{2}} (\hat{\mathbf{y}}_i^\Omega - \hat{\mathbf{y}}_{i+1}^\Omega) \quad (25)$$

inserting (20) and (25) into (24) produces

$$\hat{\sigma}_P^2(\tau) = \frac{72}{M \tau_0^2 N^2 (N-1)^2 (N+1)^2} \sum_{i=1}^M \left[(D_i - D_{i+1}) - \frac{N-1}{2} (C_i - C_{i+1}) \right]^2 \quad (26)$$

where (C_i, D_i) and (C_{i+1}, D_{i+1}) is two pairs of accumulated sums being consecutive. These may be either forms by the direct accumulation of (15) and (16) or through the decimation rule of (36) and (37), as long as N is the number of samples in each block (being of equal length) and that the block observation time $\tau = N\tau_0$. Using the decimation rules, any τ calculation can be produced and then their PVAR calculated using (26). Notice that M is the number of averaged blocks.

E. MVAR calculation

It can be also easily verified that the sums C_i may be used for computing MVAR. The MVAR estimator is defined by (7) and (8). However, (7) may be rewritten as

$$\hat{\mathbf{y}}_{k,\tau}^\Lambda = \frac{C_{k+1} - C_k}{N\tau}$$

Therefore, (8) becomes

$$\text{MVAR}(\tau) = \frac{1}{2N^2\tau^2} \left\langle (C_{k+2} - 2C_{k+1} - C_k)^2 \right\rangle.$$

F. Estimator bias

The observant reader notices that (20) and (26) does not fully agree with the previous work. In the generic formulas $\tau = N\tau_0$ is assumed for τ^3 , so it would be fair to assume that $\tau^3 = N^3\tau_0^3$ where this detailed analysis shows that in actual fact we should use $\tau^3 = N(N-1)(N+1)\tau_0^3 = N(N^2-1)\tau_0^3$ in order to be bias-free in phase, frequency and PVAR estimation. The scale error introduces would be $(N-1)(N+1)/N^2 = 1-1/N^2$, thus showing a too small value. However, due to the N^2 part, this effect would be negligible for larger N , and this article presents a practical way of decimating values in order to further increase N . However, due warning is relevant whenever low N is used, to use the corrected estimator form. These estimators is comparable to the work of Barnes [7], but direct comparison should recall that Barnes use a shifted t_n starting with τ_0 and not 0, so due adjustments are necessary.

V. DECIMATION

A. Decimation of different sized blocks

The key idea in decimation is to form the (C, D) pair for a larger set of samples. Consider a block of N_{12} samples. The definition says

$$C_{12} = \sum_{n=0}^{N_{12}-1} x_n \quad (27)$$

$$D_{12} = \sum_{n=0}^{N_{12}-1} nx_n \quad (28)$$

but for practical reason processing is done on two sub blocks being N_1 and then N_2 samples long, giving

$$N_{12} = N_1 + N_2 \quad (29)$$

$$C_1 = \sum_{n=0}^{N_1-1} x_n \quad (30)$$

$$C_2 = \sum_{n=0}^{N_2-1} x_{N_1+n} \quad (31)$$

$$D_1 = \sum_{n=0}^{N_1-1} nx_n \quad (32)$$

$$D_2 = \sum_{n=0}^{N_2-1} nx_{N_1+n} \quad (33)$$

the C_{12} sum can be reformulated as

$$\begin{aligned} C_{12} &= \sum_{n=0}^{N_{12}-1} x_n \\ &= \sum_{n=0}^{N_1-1} x_n + \sum_{n=N_1}^{N_{12}-1} x_n \\ &= C_1 + \sum_{n=0}^{N_2-1} x_{N_1+n} \\ &= C_1 + C_2 \end{aligned} \quad (34)$$

where N_1 can be chosen arbitrarily under the assumption $0 \leq N_1 \leq N_{12}$ and then $N_2 = N_{12} - N_1$. Similarly the D_{12} sum can be reformulated as

$$\begin{aligned} D_{12} &= \sum_{n=0}^{N_{12}-1} nx_n \\ &= \sum_{n=0}^{N_1-1} nx_n + \sum_{n=N_1}^{N_{12}-1} nx_n \\ &= D_1 + \sum_{n=0}^{N_2-1} (N_1+n)x_{N_1+n} \\ &= D_1 + \sum_{n=0}^{N_2-1} N_1x_{N_1+n} + \sum_{n=0}^{N_2-1} nx_{N_1+n} \\ &= D_1 + N_1 \sum_{n=0}^{N_2-1} x_{N_1+n} + D_2 \\ &= D_1 + N_1C_2 + D_2 \end{aligned} \quad (35)$$

Thus using (34) and (35) any set of consecutive blocks can be further decimated to form a new longer block. For each decimation, only the length N and sums C and D needs to be stored, thus reducing the memory requirements. In a pre-processing stage, these sums can be produced. The decimation rule thus allows for any length being a multiple to the pre-processed length to be produced, with maintained non-biased phase, frequency and PVAR estimator properties.

B. Decimation by N

The generalized decimate by N formulation follows natural from this realization and is proved directly though recursively use of the above rule. Consider that a preprocessing provides C and D values for block of length N_{pre} , then on first decimation block 0 and 1 is decimated, and block 1 needs to be raised with $N_{\text{pre}}C_1$ (as illustrated in Figure 4), as block 2 is decimated in the next round, $2N_{\text{pre}}C_2$ etc, and in general we find



$$C_{\text{tot}} = \sum_{i=0}^{N_2-1} C_i \quad (36)$$

$$D_{\text{tot}} = \sum_{i=0}^{N_2-1} D_i + iN_1C_i \quad (37)$$

for the observation time $\tau = \tau_0N_1N_2$ with N_1N_2 samples, for use with the (19) and (20) estimators.

This decimation by N mechanism can be used together with the generic block decimation to form any form of block processing suitable, thus providing a high degree of freedom in how large amounts of data is being decimated.

C. Geometric representation

1) *Decimation rule:* Figure 3 represents the weight functions of the C and D elementary block pair that we will symbolize respectively with  and .

In the same way as in § V-A, let us consider two consecutive sets of N_1 samples, beginning respectively at instants t_1 and t_2 , and the whole sequence of $N_{12} = 2N_1$ samples. We can

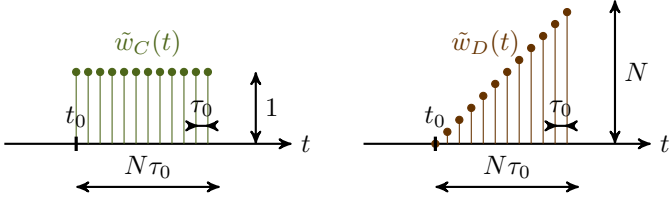


Fig. 3. weight functions of the C and D elementary block pair.

form the blocks C_1 and D_1 over the first sub-sequence, C_2 and D_2 over the second one as well as C_{12} and D_{12} over the whole sequence (see left hand side of Figure 4). The right hand side of Figure 4 shows that $C_{12} = C_1 + C_2$ and $D_{12} = D_1 + N_1 C_2 + D_2$ as demonstrated in (34) and (35).

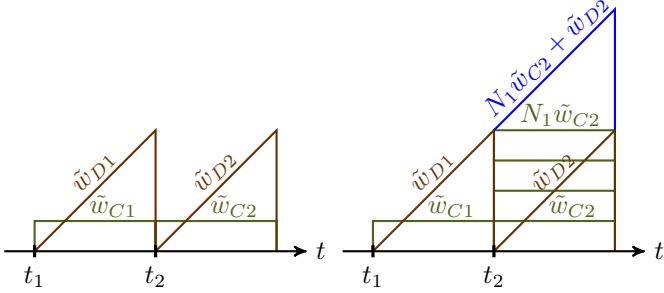


Fig. 4. Decimation rule of the (C_1, D_1) and (C_2, D_2) block pair weight functions over two adjacent sub-sequences for composing the (C_{12}, D_{12}) block pair weight functions over the whole sequence.

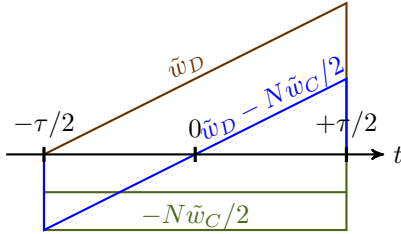


Fig. 5. Association of the (C, D) block pair weight functions for composing the Ω -counter weight function.

2) *The Ω -counter weight function:* As stated in § II, the weight function of the Ω -counter for phase data $x(t)$ is given by (3). Figure 5 shows that the estimate \hat{y}^Ω of the Ω -counter is:

$$\hat{y}^\Omega \propto D - \frac{N}{2}C.$$

3) *The PVAR weight function:* Since $\text{PVAR}(\tau) = \frac{1}{2} \langle (\hat{y}_2^\Omega - \hat{y}_1^\Omega)^2 \rangle$, it comes

$$\text{PVAR}(\tau) \propto \left\langle \left(D_2 - \frac{N}{2}C_2 - D_1 + \frac{N}{2}C_1 \right)^2 \right\rangle$$

as illustrated by Figure 6.

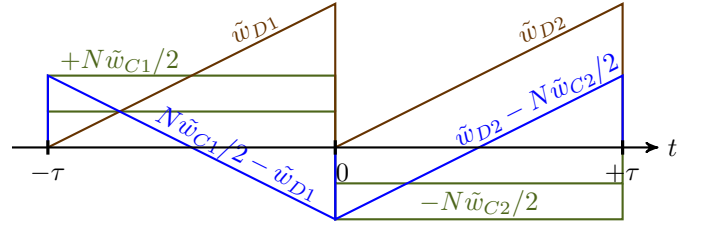


Fig. 6. Association of the (C_1, D_1) and (C_2, D_2) block pair weight functions for composing the PVAR weight function.

D. Decimation processing

It should be noted that the decimation process may be used recursively, such that it is used as high-speed preprocessing in FPGA and that the (C, D) pairs is produced for each N_1 samples as suitable for the plotted lowest τ . Another benefit of the decimation processing is that if the FPGA front-end has a limit to the number of supported N_1 it can process, software can then continue the decimation without causing a bias. This provides for a high degree of flexibility without suffering from high memory requirements, high processing needs or for that matter overly complex HW support.

E. Decimation biases

The decimation process avoids the low- τ bias errors typically seen when using frequency estimation with Λ -counters or Ω -counters. Such setup suffers from the fact that the counter have a fixed $\tau = 1/(2\pi f_H)$ pre-filter of Λ or Ω type, which reduces the system bandwidth f_H , but for higher τ the main lobes of AVAR frequency response is within the pre-filter pass-band of this system bandwidth and the pre-filtering provides no benefit for longer τ readings, for such τ values the raw phase or frequency readings of the Λ -counter mode can be used directly as the fixed τ Λ or Ω pre-filtering adds no benefit.

The pre-filtering is indeed to filter out white noise for better frequency readings, but the AVAR processing is unable to extend the filtering to higher τ values, as it does not perform τ -filtering decimation. The proposed decimation rule is able to provide proper Ω response for any τ , but bias-free decimation is only possible using two scalar values rather than one.

Thus, existing Ω -counters producing a single frequency reading for a block interval is not possible to decimate properly. Existing counters is best used in their Π time-interval mode and decimation performed in software instead. The scalar values C and D can also be used to estimate phase and frequency with least square properties, so this comes as a benefit for normal counter usage.

Any users of Λ -counter and Ω -counter should be cautioned to use them without proper decimation routines, as their estimates can be biased and unusable for metrology use.

F. Multi- τ decimation

Another aspect of the decimation processing is not only that many τ can be produced out of the same sample or block sequence, but once a suitable set of τ variants have been

TABLE II
ILLUSTRATION OF COUNTER NOISE REDUCTION WITH τ .

τ	noise
100 ns	$1.6E - 9$
1 μ s	$5E - 11$
10 μ s	$1.6E - 12$
100 μ s	$5E - 14$
1 ms	$1.6E - 15$

produced, these can be decimated recursively in suitable form to create τ variants of higher multiples. One such approach would be to produce the 1 to 9 τ multiples (or only 1, 2 and 5 multiples which is enough for a log-log plot) of accumulates for τ being 1 s, thus producing the 1 to 9 s sums, and by recursive decimation by 10 produces the same set of points on the log-log plot, but for 10th multiple of time, for each recursive step. This will allow for large ranges of τ to be calculated for a reasonable amount of memory and calculation power.

G. Overlapping decimation

It should be realized that decimation over say 10 blocks can produce new decimation values for each new block that arrives, thus providing an overlapping process. Doing such overlapping ensures that the achieved degrees of freedom remains high and thus it is the recommended process for postprocessing.

On the other hand, the necessity to achieve the highest sampling rate prohibits the use of overlapping for preprocessing. The resulting loss on degrees of freedom is advantageously compensated by the benefits of high speed accumulation which ensures that white phase noise is being reduced optimally in order to improve the quality of higher τ data.

Users shall be cautioned not to interleave the intermediate blocks, as this paper does not detail how decimation should be performed with overlapped results. The decimation routines assumed continuous blocks, but not overlapping blocks. The improper use of overlapping blocks will produce biases in estimates and should be avoided. If overlapping, and thus multiple reference to phase samples, is avoided even considering interleaved processing, the biasing effect can be avoided.

H. Hardware implementation issues

1) τ_0 : A hardware/FPGA implementation will time-stamp every N_{prescale} cycle of the signal. The period $t_{\text{period}} = 1/f$ of the incoming signal together with the prescale division provide the basic observation interval $\tau_0 = N_{\text{prescale}} \times t_{\text{period}}$. Keeping the τ_0 low ensures that the white noise rejection and the counter quantization noise rejection, both following the $1/\tau^{1.5}$ deviation slope, gets into action quickly and rejects these noises such that actual source noise can be observed for short tau.

2) *Noise rejection*: Consider a 10 MHz source, where we time-stamp every period in a 100 MHz clock with no interpolation. The quantization noise can be estimated to be $1/(\sqrt{12}\tau^{1.5})$, as illustrated in Table II, thus providing a high rejection of noise already at 1 ms observation intervals, even if

no hardware interpolation is done. The interpolation is instead done using a very high amount of samples (10 MS/s in this scenario) which is least-square matched, thus rejecting the quantization noise. The white noise rejection follows the same properties. It should be understood that the decimation will step-wise provide a narrower system bandwidth, as expected from MVAR and PVAR processing.

3) *Time-stamping*: The time-stamping for each event, every τ_0 , is done by sampling a free-running time-counter, that forming the time sample of that event. As we decimate these samples into a block, we run into the aspect of the wrapping of the time counter. If the time-counter is large enough, it may wrap once within a block. By keeping the first time-stamp, then if adding $N - 1$ causes it to go beyond the wrap-count, then we know that the counter wrapped.

VI. TOWARDS A STANDARD FOR THE OUTPUT FORMAT OF Ω -COUNTERS

A. Basic Ω -counter

In order to maximize the acquisition speed of such a counter, the preprocessing should be reduced to its minimum. Therefore, we recommend to only compute and store the (C, D) block pair at each initial step without any normalization. The length of the step τ_0 should be chosen in order to have a knowledge of what happens at short term without the storage rate of the block pairs becomes an issue. A duration range between $1 \text{ ms} < \tau_0 < 100 \text{ ms}$ seems to be good compromise.

In order to reach the best phase noise rejection, the smallest $t_{\text{period}} = 1/f$ should be chosen. Thus, for a DUT frequency of 10 MHz, this yield:

- $t_{\text{period}} = 100 \text{ ns}$
- $\tau_0 = 10 \text{ ms}$
- $N_{\text{prescale}} = 10^5$.

B. An universal counter

We noticed in § IV-E that MVAR can be computed from the C_i blocks. Therefore, an Ω -counter provides also the basic data for calculating MVAR and thus may be considered as an improved Λ -counter. Moreover, by adding the initial phase of each preprocessing block, i.e. x_i , it will be also possible to compute directly AVAR. Such a counter, providing at each step the triplet (x_i, C_i, D_i) , may be considered as an “universal counter”.

VII. SUMMARY

Presented is an improved method to perform least-square phase, frequency and PVAR estimates, allowing for high speed accumulation similar to [3], but extending into any τ needed. It also provides for multi- τ analysis from the same basic accumulation. The decimation method can be applied recursively to form longer τ estimates, reusing existing calculations and thus saving processing. Thus, it provides a practical method to provide PDEV log-log plots, providing means to save memory and processing power without the risk of introducing biases in estimates, as previous methods have shown.

REFERENCES

- [1] D. W. Allan, "Statistics of atomic frequency standards," *Proceedings of the IEEE*, Vol. 54, No. 2, February, 1966.
- [2] E. Rubiola, M. Lenczner, P.-Y. Bourgeois, and F. Vernotte, "The Omega counter, a frequency counter based on the linear regression," *IEEE UFFC*, 2016, submitted (see arXiv:1506.05009).
- [3] J. J. Snyder, "An ultra-high resolution frequency meter," *Proceedings of 35th Annual Frequency Control Symposium*, May, 1981.
- [4] E. Rubiola, "On the measurement of frequency and of its sample variance with high-resolution counters," *RSI*, vol. 76, no. 5, May 2005, also arXiv:physics/0411227, Dec. 2004.
- [5] D. W. Allan and J. A. Barnes, "A modified "allan variance" with increase oscillator characterization ability," *Proceedings of 35th Annual Frequency Control Symposium*, May, 1981, <http://tf.nist.gov/general/pdf/560.pdf>.
- [6] S. Johansson, "New frequency counting principle improves resolution," *Proceedings of 37th PTI*, 2005, <http://spectracom.com/sites/default/files/document-files/Continuous-timestamping-article.pdf>.
- [7] J. Barnes, "The measurement of linear frequency drift in oscillators," *Proceedings of 15th PTI*, 1983, http://tycho.usno.navy.mil/pti/1983papers/Vol 15_29.pdf.
- [8] B. S. Everitt, "The cambridge dictionary of statistics," *Cambridge University Press*, 1998.
- [9] F. Vernotte, M. Lenczner, P.-Y. Bourgeois, and E. Rubiola, "The parabolic variance (PVAR), a wavelet variance based on the least-square fit," *IEEE UFFC*, 2016, accepted (see arXiv:1506.00687).
- [10] E. Benkler, C. Lisdat, and U. Sterr, "On the relation between uncertainties of weighted frequency averages and the various types of allan deviations," *Metrologia*, vol. 52, no. 4, pp. 565-574, August 2015, submitted (see arXiv:1504.00466).